

EUREKA UPRIGHTS

 
1400 Series

• Upper Casting Assembly

Models:

1401A/B/D, 1402A/D, 1403A, 1404A/B, 1405A, 1406A/B/D/E/G/H/J/K, 1407/B/D, 1408A, 1409A/B, 1410A/D, 1411A, 1412A/B/D, 1413A/B, 1414A/B, 1415A/AG/B/BG, 1416A/AS/B/BS/D, 1417A/B, 1418A/B, 1419A/B, 1420A, 1421A, 1422A, 1423A/B, 1424A/B/D/E/F/G, 1425A/B/D/E/F/G, 1426A/B, 1427A/B/D/E, 1428A/B/D, 1429A/D, 1431A/B/D, 1432A/B/D/E/F, 1435A/B/D, 1436A, 1437A, 1438A, 1439A, 1440A, 1441A, 1442A/B/D, 1443A/B/D, 1444A, 1446A/B, 1447A/B, 1448A, /B/D, 1450A, 1452A/B/F, 1453A/B/D, 1454A, 1455A, 1456A, 1457A/B, 1458A/B/D/E/F, 1459A, 1462A, 1463A, 1466A, 1469A, 1470A/D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/AM/B/BM, 1490A, 1495A

- 1 E-53143 Shoulder Screw
- 1 E-48386B2 Shoulder Screw, 1405A, 1406B, 1414A, 1415AG, 1415B/BG, 1416A/AS, 1417A, 1420A, 1421A, 1422A, 1423A, 1424A
- 1 E-53147 Shoulder Screw, 1462A
- 2 E-268341 Adjustment Knob, 1425G, 1427E, 1428B/D, 1429D, 1436A, 1439A, 1470D, 1485A
- E-252941 Adjustment Knob, 1431D
- 2 E-25649A1 Adjustment Knob, 1432A/B/D/E/F, 1435B/D, 1437A, 1443A/B/D
- 3 E-380531 Adjustment Knob, 1435A, 1489B/BM
- 3 E-380521 Adjustment Knob, 1442A/B/D, 1447B, 1466A, 1473A/B, 1485B
- 2 E-268331 Adjustment Knob, 1452F, 1457B, 1458F, 1469A, 1471A/B, 1489A/AM, 1490A
- 3 E-380532 Adjustment Knob, 1495A
- 4 E-25729A6 Slide Cover, 1462A
- 5 E-24866A5 Slide Adjustment, 1462A
- E-4864912 Hood & Nameplate Assy, 1402D
- 6 E-538902 Hood & Nameplate Assy, 1425G, 1429D
- 7 E-538622 Hood & Nameplate Assy, 1427E, 1428B/D, 1436A, 1485A, 1486A
- 6 E-486619 Hood & Nameplate Assy, 1431D
- 6 E-538909 Hood & Nameplate Assy, 1432A, 1437A
- 8 E-5390429 Hood & Graphics Assy, 1432D/E/F, 1435B, 1443A/B
- 8 E-5390427 Hood & Graphics Assy, 1435D
- 8 E-557584 Hood & Nameplate Assy, 1439A
- 6 E-572062 Hood & Decal Assy, 1442A
- 6 E-539045 Hood & Graphics Assy, 1442B
- 8 E-2708417 Hood & Graphics Assy, 1442D
- 9 E-539741 Hood & Nameplate Assy, 1447B
- 8 E-557578 Hood & Nameplate Assy, 1450A
- 10 E-496364 Hood & Nameplate Assy, 1452F
- 8 E-541257 Hood & Nameplate Assy, 1457B
- 9 E-564461 Hood & Nameplate Assy, 1462A
- 8 E-539041 Hood & Graphics Assy, 1466A
- 9 E-562702 Hood & Graphics Assy, 1469A
- 9 E-145467 Hood & Graphics Assy, 1473B
- 8 E-5390419 Hood & Graphics Assy, 1485B
- 8 E-2708412 Hood & Graphics Assy, 1485D
- 9 E-539744 Hood & Nameplate Assy, 1489A/B
- 9 E-542661 Hood & Nameplate Assy, 1489A/AM/BM
- 10 E-496363 Hood & Nameplate Assy, 1490A
- 11 E-542663 Hood & Nameplate Assy, 1495A
- E-55203 Nameplate, 1402D
- E-37187 Nameplate, 1425G, 1427E, 1428B, 1429D, 1470D
- E-37391 Nameplate, 1431D
- E-37953 Nameplate, 1432A, 1437A, 1443A
- E-57079 Nameplate, 1447B
- E-37177 Nameplate, 1452F
- E-37255 Nameplate, 1462A
- E-37596 Nameplate, 1471A/B
- E-37841 Nameplate, 1489A/AM
- E-37200 Nameplate, 1490A
- E-38281 Nameplate, 1495A
- E-22285 Lens
- 12 E-134339 Lens, 1410D, 1411A, 1412A/B/D, 1424E/F/G, 1427A/B/E, 1428A/B, 1436A, 1453D, 1470A/D, 1471A/B, 1485A, 1486A

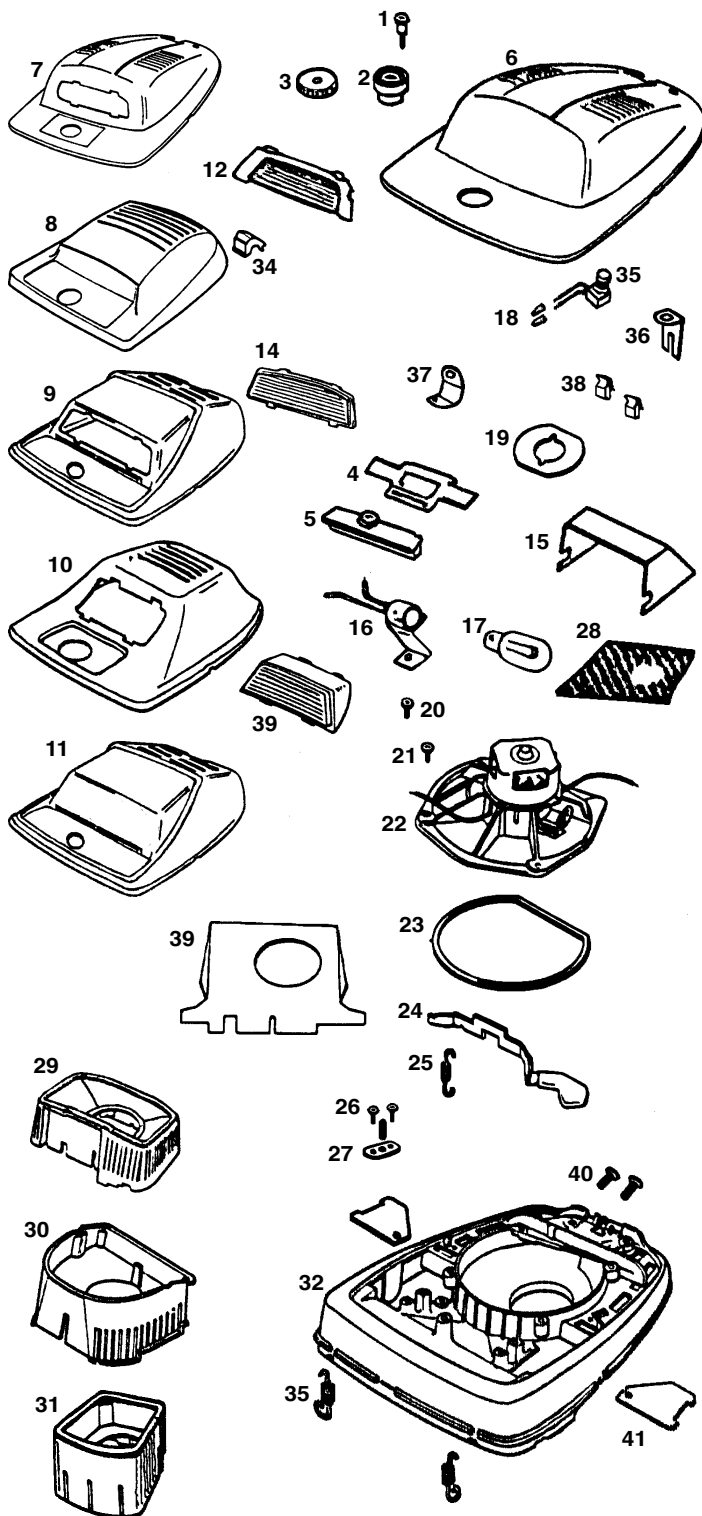

EUREKA UPRIGHTS

1400 Series

• Upper Casting Assembly

Models:

1401A/B/D, 1402A/D, 1403A, 1404A/B, 1405A, 1406A/B/D/E/G/H/J/K, 1407/B/D, 1408A, 1409A/B, 1410A/D, 1411A, 1412A/B/D, 1413A/B, 1414A/B, 1415A/AG/B/BG, 1416A/AS/B/BS/D, 1417A/B, 1418A/B, 1419A/B, 1420A, 1421A, 1422A, 1423A/B, 1424A/B/D/E/F/G, 1425A/B/D/E/F/G, 1426A/B, 1427A/B/D/E, 1428A/B/D, 1429A/D, 1431A/B/D, 1432A/B/D/E/F, 1435A/B/D, 1436A, 1437A, 1438A, 1439A, 1440A, 1441A, 1442A/B/D, 1443A/B/D, 1444A, 1446A/B, 1447A/B, 1448A, /B/D, 1450A, 1452A/B/F, 1453A, /B/D, 1454A, 1455A, 1456A, 1457A/B, 1458A/B/D/ E/F, 1459A, 1462A, 1463A, 1466A, 1469A, 1470A/D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/AM/B/BM, 1490A, 1495A

- | | | | | | | | | | |
|----|-------|------------------|-------|--|----|-------|------------------|-------|---|
| 13 | | E-1260014 | | Lens , 1425A/B, 1452F, 1454A, 1455A, 1456A, 1458A/B/D/E/F, 1459A, 1463A, 1490A | 31 | | E-49358 | | Air Deflector Assy , 1452F, 1458F, 1462A |
| 12 | | E-374753 | | Lens , 1428D | 32 | | E-534589 | | Base Assembly , frost white, common |
| 14 | | E-126018 | | Lens , 1447B, 1469A, 1473A/B, 1489A/B | 32 | | E-550483 | | Base Assembly , 1402D |
| 12 | | E-13751 | | Lens , 1450A, 1457B, 1466A, 1485B/D | 32 | | E-4919127 | | Base Assembly , 1427E, 1458F, 1473A |
| 14 | | E-126018 | | Lens , 1462A | 32 | | E-5345612 | | Base Assembly , 1432D/E/F, 1435B/D, 1442D, 1443B/D, 1485D |
| | | E-120905 | | Lens Housing , for models using E-22285 lens | 32 | | E-5345810 | | Base Assembly , 1489B |
| 15 | | E-36525 | | Light Shield , 1458F, 1490A | 32 | | E-5345811 | | Base Assembly , 1495A |
| 16 | | E-35958A | | Headlamp Socket Assy , 1427E, 1428B/D, 1436A, 1447B, 1450A, 1452F, 1457B, 1458F, 1462A, 1466A, 1469A, 1470D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/B, 1490A | | | E-24964A | | Cam , right side |
| | | | | | | | E-25965A | | Cam , left side |
| | | | | | | | E-53118 | | Rivet |
| | | | | | | | E-53133 | | Washer |
| 17 | | E-40009A | | Bulb , 1427E, 1428B/D, 1436A, 1447B, 1450A, 1452F, 1457B, 1458F, 1462A, 1466A, 1469A, 1470D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/B, 1490A | 33 | | E-53117 | | Hood Spring , 10 pk, 1402D, 1425G, 1427E, 1428B/D, 1429D, 1431D, 1432A, 1436A, 1437A, 1442A, 1443A, 1447B, 1452F, 1458F, 1462A, 1469A, 1470D, 1471A/B, 1473A, 1473B, 1485A/B, 1486A, 1489A/AM/B/BM, 1490A, 1495A |
| 18 | | E-532141 | | Wire Nut | 34 | | E-270911 | | Switch Button , 1432D/E/F, 1435D |
| 19 | | E-37020 | | Motor Shield , 1402D, 1425G, 1429D, 1431D, 1432A, 1437A, 1442A, 1443A/B | 35 | | E-541512 | | Switch , step-on, flat side, late models |
| 20 | | E-5323813 | | Screw , motor | 35 | | E-3640913 | | Switch , step-on, 13" leads |
| 21 | | E-5323814 | | Screw , motor mount | 35 | | E-3640917 | | Switch , step-on, 1489AM/BM |
| 22 | | E-533494 | | Motor Assembly , 4 amp, 1 speed, common | | | E-55446 | | Switch Nut |
| 22 | | E-533497 | | Motor Assembly , 1 speed, 1432F, 1435A/D, 1443D | 36 | | E-37989 | | Switch Clip , 1432D/E/F, 1435B/D, 1442D, 1443B/D |
| 22 | | E-533493 | | Motor Assembly , 1450A, 1457B, 1462A, 1466A, 1469A, 1471B, 1473A, 1486A, 1489A/B, 1490A | 37 | | E-37590 | | Bushing Bracket , 1432D/E, 1435B/D |
| 22 | | E-533496 | | Motor Assembly , 1489AM/BM | 38 | | E-55015 | | Wire Clip |
| 23 | | E-30517 | | Motor Seal Gasket | 39 | | E-37676A | | Separator , 1432B/D/E/F, 1435A/B/D, 1439A, 1442B/D, 1443D, 1457B, 1466A/B, 1485D |
| 24 | | E-24834A1 | | Foot Pedal | 40 | | E-532287 | | Bag Screw |
| 25 | | E-53097 | | Spring , foot pedal | 41 | | E-36263 | | Wheel Cover , 1402D, 1425G, 1429D, 1431D, 1432A/B/D/E/F, 1435A/B/D, 1437A, 1439A, 1442A/B/D, 1443A/B/D, 1450A, 1457B, 1466A, 1473B, 1485B/D, 1489B/BM, 1490A, 1495A |
| 26 | | E-5323814 | | Screw , clamp | | | E-532155 | | Screw , hood to base, 1432B/D/E/F, 1435A/B/D, 1439A, 1442B/D, 1443B/D, 1450A, 1457B, 1466A, 1485B/D |
| 27 | | E-53140 | | Clamp & Screw Assy | | | E-53124 | | Distributor Spring , right side, 5 pk |
| | | E-48642 | | Set Screw | | | E-53116 | | Distributor Spring , left side, 5 pk |
| | | E-47754A | | Adjustment Clamp | | | | | |
| 28 | | E-36459 | | Motor Fan Shield , 1452F, 1458F, 1495A | | | | | |
| 28 | | N/A | | Motor Fan Shield , 1462A, 1489A | | | | | |
| 28 | | E-36471A | | Motor Fan Shield , 1469A | | | | | |
| 29 | | E-37674 | | Air Deflector Assy | | | | | |
| 30 | | N/A | | Air Deflector Assy , 1447B, 1473A, 1489AM/B/BM, 1495A | | | | | |

EUREKA UPRIGHTS

 
1400 Series

• Lower Casting Assembly

Models:

1401A/B/D, 1402A/D, 1403A, 1404A/B, 1405A, 1406A/B/D, 1406D/E/G/H/J/K, 1407A/B/D, 1408A, 1409A/B, 1410A/D, 1411A, 1412A/B/D, 1413A/B, 1414A/B, 1415A/AG/B/BG, 1416A/AS/B/BS/D, 1417A/B, 1418A/B, 1419A/B, 1420A, 1421A, 1422A, 1423A/B, 1424A/B/D/E/F/G, 1425A/B/D/F/G, 1426A/B, 1427A/B/D/E, 1428A/B/D, 1429D, 1431A/B/D, 1432A/B/D/E/F, 1435A/B/D, 1436A, 1437A, 1438A, 1439A, 1440A, 1441A, 1442A/B/D, 1443A/B/D, 1444A, 1446A/B, 1447A/B, 1448A/B/D, 1450A, 1452A/B/F, 1453A/B/D, 1454A/B, 1455A, 1456A, 1457A/B, 1458A/B/D/E/F, 1459A, 1462A, 1463A, 1466A, 1469A, 1470A/D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/AM/B/BM, 1495A

- 1 E-369994 Furniture Guard, frost white
- 1 E-10180M10 Furniture Guard, off-white, 1414A/B,1418A/B, 1420A,1421A,1422A,1424A/B
- 1 E-3699931 Furniture Guard, red pepper, 1432A/B/D/E/F, 1470D,1490AT
- 1 E-3699933 Furniture Guard, red pepper, 1435A/B/D,1436A, 1442A/B/D,1443A/B/D
- 1 E-259291 Furniture Guard, white w/ green stripe, 1440A, 1441A,1444A,1446A,1446B,1447A,1448A, 1453A,1453B,1454A,1455A,1457A,1458A, 1463A
- E-42952 Bumper Clip, for E-10180M10 furniture guard
- E-532282 Screw, bumper clip, 10pk
- 2 E-47562 Rear Axle
- 3 E-530762 Axle Spring, 5 pk
- 3 E-36161 Axle Spring, 1407A,1414A,1415A/AG/B/BG, 1416A/AS,1417A,1418A,1419A,1420A, 1421A,1422A,1423A,1424A
- 4 E-53111 Axle Clip, 5 pk
- 5 E-5323811 Screw, clip
- 6 E-358591 Front Wheel, grey, flat inside, early models
- 6 E-35859A1 Front Wheel, grey, scouped inside, late models
- E-53110 Washer, front wheel
- E-47585 Washer, front wheel, 1431D
- 7 E-36047A Front Axle
- 7 E-36186 Front Axle, 1402D
- 7 E-35947A Front Axle, 1423E/F, 1435A/B/D
- 8 E-30563A Belt, sold each
- 8 E-52100 Belt, 2 pack
- 9 E-358582 Rear Wheel, grey
- 10 E-533501 Brush Roll, wood, hex end, 12"
- E-541041 Brush Roll, 1432D/E/F,1435D
- E-533981 Brush Roll, VG2, 1450A,1452F,1469A, 1489A/B/BM,1490AT,1495A
- 11 E-46538 Foam Tape
- 12 E-25359B Bottom Plate, w/ hooks, early models
- 12 E-259221 Bottom Plate, w/ slots, new style

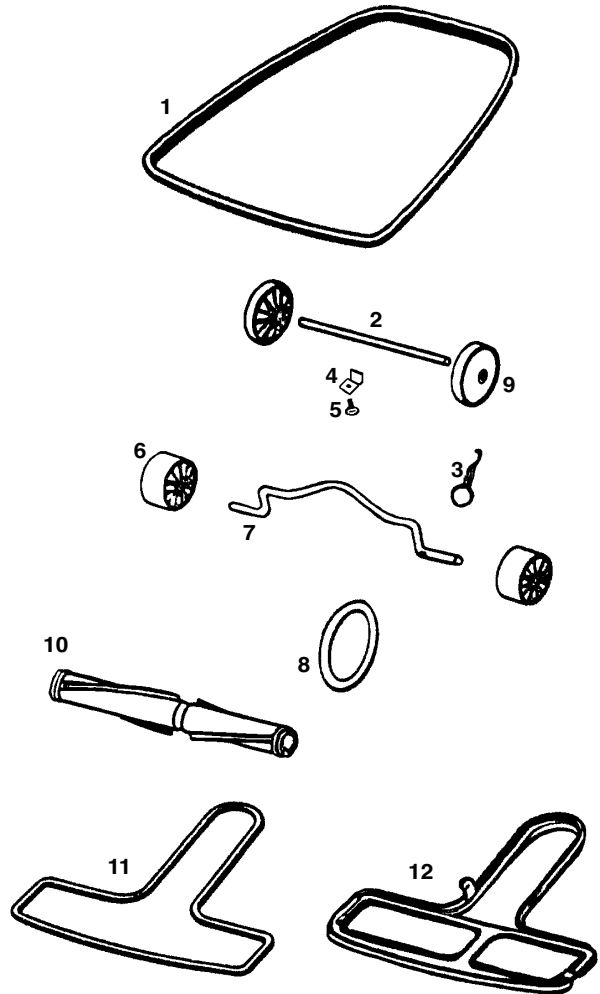


24 HOUR FAX ORDERING

Fax your orders

24 hours a day, 7 days a week, 365 days a year!

 (800) 811-6112

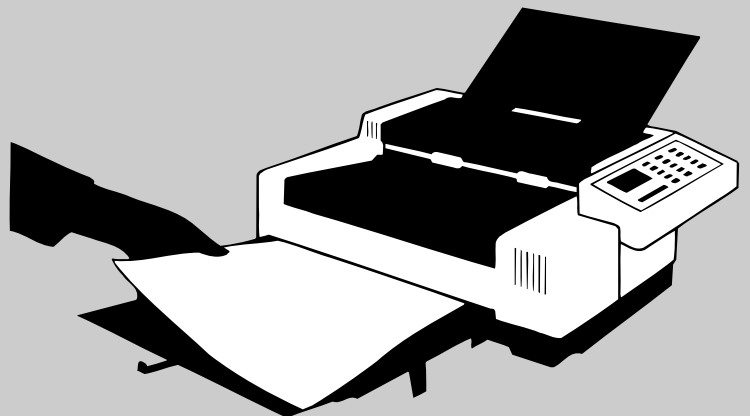

EUREKA UPRIGHTS

1400 Series

• Handle Assembly

Models:

1401A/B/D, 1402A/D, 1403A, 1404A/B, 1405A, 1406A/B/D, 1406D/E/G/H/J/K, 1407A/B/D, 1408A, 1409A/B, 1410A/D, 1411A, 1412A/B/D, 1413A/B, 1414A/B, 1415A/AG/B/BG, 1416A/AS/B/BS/D, 1417A/B, 1418A/B, 1419A/B, 1420A, 1421A, 1422A, 1423A/B, 1424A/B/D/E/F/G, 1425A/B/D/F/G, 1426A/B, 1427A/B/D/E, 1428A/B/D, 1429D, 1431A/B/D, 1432A/B/D/E/F, 1435A/B/D, 1436A, 1437A, 1438A, 1439A, 1440A, 1441A, 1442A/B/D, 1443A/B/D, 1444A, 1446A/B, 1447A/B, 1448A/B/D, 1450A, 1452A/B/F, 1453A/B/D, 1454A/B, 1455A, 1456A, 1457A/B, 1458A/B/D/E/F, 1459A, 1462A, 1463A, 1466A, 1469A, 1470A/D, 1471A/B, 1473A/B, 1485A/B/D, 1486A, 1489A/AM/B/BM, 1495A

SECTION A

- 1 E-2532920 Upper Handle Assy, chrome
- 2 E-126378 Lower Handle Assy, plated
- 3 E-352938 Handle Grip
- 4 E-531981 Handle Screw Assy, 6pk
- 5 E-537472 Cord Retainer Set, upper/lower, black
- 5 E-537471 Cord Retainer Set, upper/lower, frost white
- 5 E-369652 Cord Retainer, upper, black, quik release
- E-344085 Handle Cap

SECTION B

- 6 E-270361 Upper Handle Assy
- 7 E-016811 Lower Handle Assy
- 8 E-376891 Handle Cap
- 9 E-266591 Handle Connector
- 10 E-535361 Snap Pin, 4pk

 
SECTION C

- 11 E-259893 Upper Handle Assy
- 12 E-369842 Lower Handle Assy,
- 13 E-368735 Handle Cap, black
- 14 E-530801 Snap Pin, 5pk
- 15 E-259882 Handle Tube Connector,


ALL MODELS

- 16 E-544151 Cord, 20ft, 6", white, w/ bushing & sleeve
- 16 E-273825 Cord, 20ft, 6", white
- 16 E-3473225 Cord, 21ft, black
- 16 E-3473227 Cord, 25ft, 6", black
- E-360972 Cord Sleeve
- 17 E-540921 Handle Socket Assy, painted, w/ lever
- 17 E-540922 Handle Socket Assy, chrome, w/ lever
- 17 E-271372 Handle Socket Only, chrome, 1495A
- 18 E-531981 Screw & Nut Assy, 6pk
- 19 E-532135 Nut,
- 20 E-53145 Bolt,
- 21 E-5323813 Screw,
- E-37157 Handle Socket Shield, 1432D/E,1442D



SECTION A

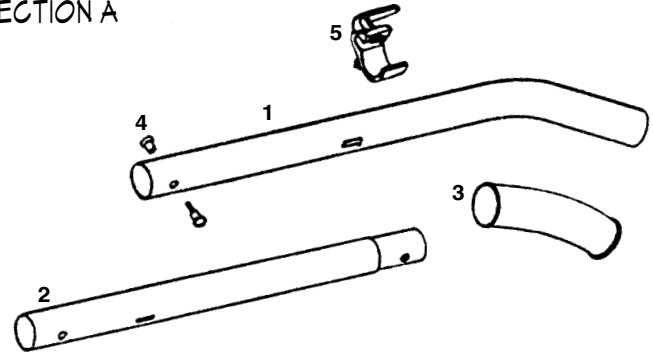

SECTION B

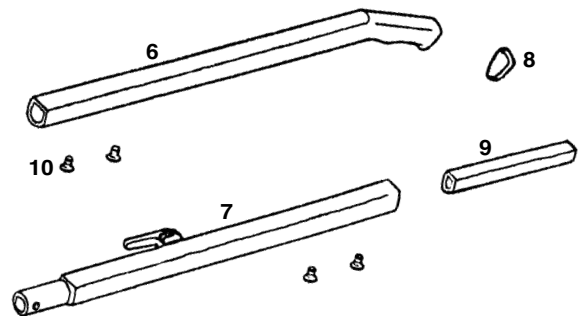 

SECTION C

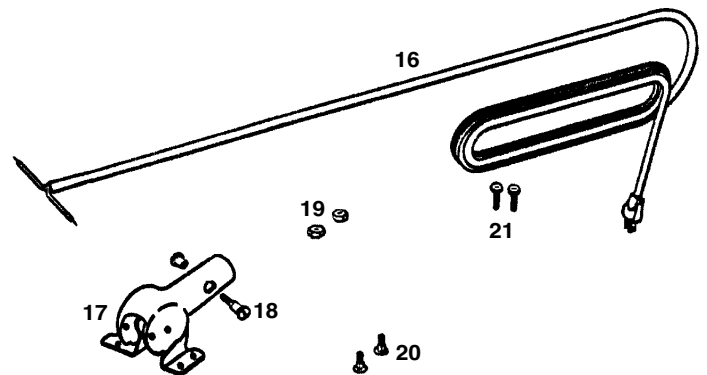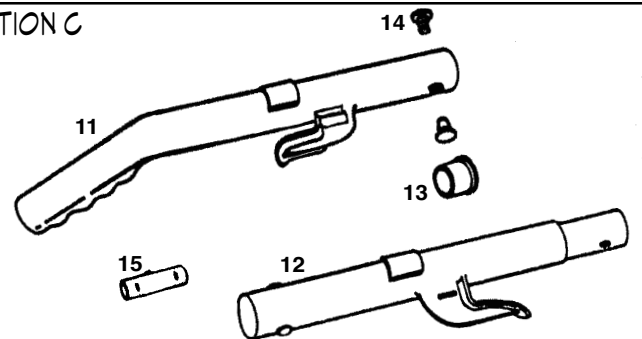  

1-800-353-9991

CALL RIGHT
NOW AND
START SAVING
ON GENUINE
EUREKA
REPAIR
PARTS