


Models: EC-14TXT6, EC-12TXT6, EC-12TXT4, EC-12SXT4

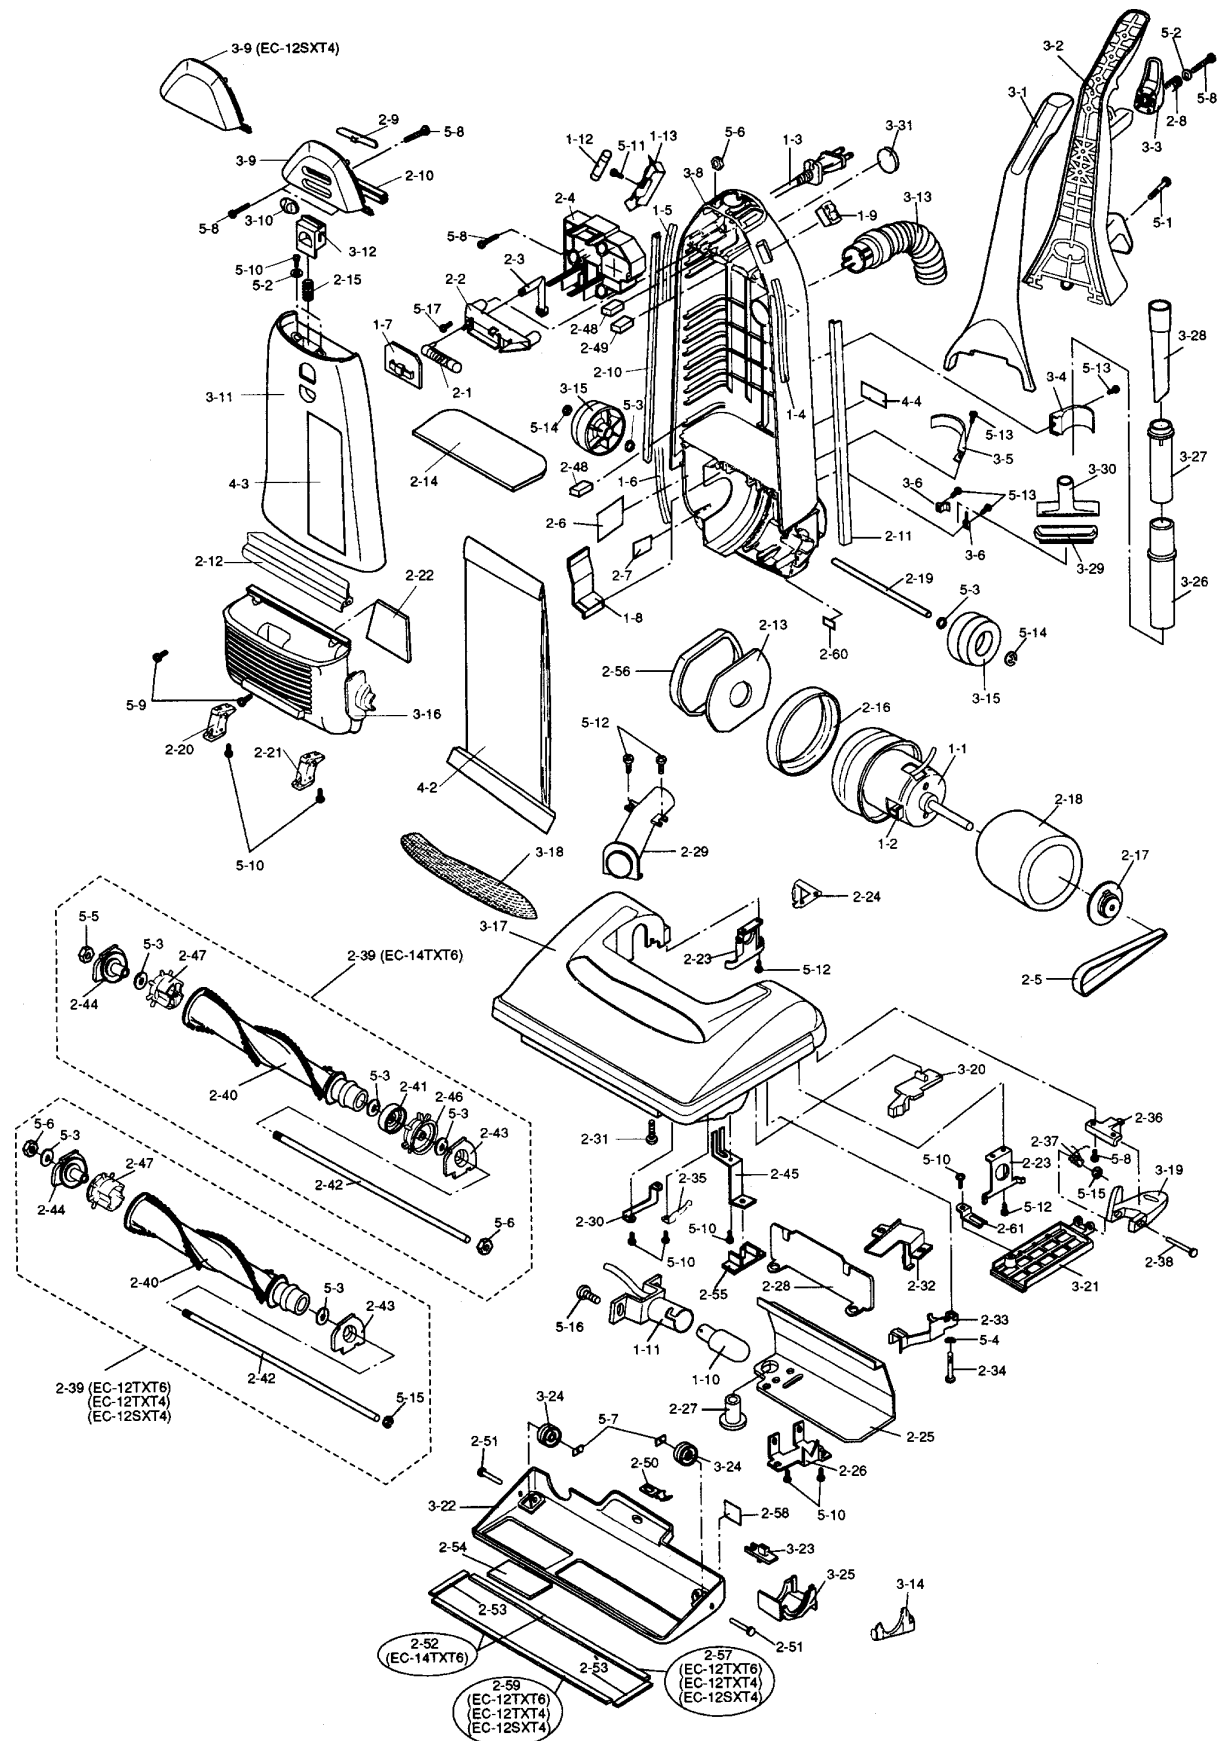

Models: EC-14TXT6, EC-12TXT6, EC-12TXT4, EC-12SXT4

## ■ ELECTRICAL PARTS

1-1	S-555	Motor Assy, 14TXT6, 12TXT6, 12TXT4
1-1	S-554	Motor Assy, 12SXT4
1-2	S-553	Carbon Brush, 14TXT6, 12TXT6, 12TXT4
1-2	S-552	Carbon Brush, 12SXT4
1-3	S-074	Power Cord, 14TXT6, 12TXT6
1-3	S-075	Power Cord, 12TXT4
1-3	S-551	Power Cord, 12SXT4
1-4	S-206	Motor Lead Wires
1-5	S-207	Circuit Lead Wires, 14TXT6, 12TXT6
1-6	S-208	Lamp Lead Wires, 14TXT6, 12TXT6
1-7	S-095	Power Control Assy, 14TXT6, 12TXT6
1-8	S-550	Triac Assy, 14TXT6, 12TXT6
1-9	S-519	Switch, on/off
1-10	S-209	Lamp, 14TXT6, 12TXT6
1-11	S-556	Lamp Socket, 14TXT6, 12TXT6
1-12	S-557	Fuse
1-13	S-558	Fuse Holder

## ■ MECHANICAL PARTS

2-1	S-101	Dust Indicator Assy, 14TXT6, 12TXT6
2-2	S-559	Dust Indicator Base
2-3	S-560	Meter Pipe Connector, 14TXT6, 12TXT6
2-4	S-561	Handle Mounting Base, 14TXT6, 12TXT6
2-5	S-013	Belt, flat, 2 pack
2-6	S-154	Body Seal Tape "S"
2-7	S-155	Body Seal Tape "L"
2-8	S-213	Spring, for cord hanger
2-9	S-563	Indicating Plate, 14TXT6, 12TXT6
2-10	S-564	Panel Seal
2-11	S-565	Body Seal
2-12	S-566	Motor Cover Seal
2-13	S-245	Motor Shelter Plate, 12SXT4
2-14	S-567	Secondary Filter, 14TXT6, 12TXT6
2-14	S-568	Secondary Filter, 12TXT4, 12SXT4
2-15	S-111	Clamp Spring
2-16	S-112	Vibration-Proof Rubber, 14TXT6, 12TXT6, 12TXT4
2-16	S-569	Vibration-Proof Rubber, 12SXT4
2-17	S-646	Vibration-Proof Fixing Rubber
2-18	S-570	Sound-Proof Sponge
2-19	S-115	Wheel Shaft
2-20	S-571	Leg Assy "TA"
2-21	S-572	Leg Assy "TB"
2-22	S-573	Clean Filter
2-23	S-574	Body Support
2-24	S-575	Belt Stopper
2-25	S-576	Reflection Plate, 14TXT6, 12TXT6
2-26	S-577	Lamp Support, 14TXT6, 12TXT6
2-27	S-217	Cord Bushing, for nozzle head, 14TXT6, 12TXT6
2-28	S-578	Heat-Proof Plate, 14TXT6, 12TXT6
2-29	S-579	Head Pipe
2-30	S-124	Head Reinforcing Plate, 14TXT6
2-31	S-125	Bottom Plate Fixing Screw
2-32	S-580	Belt Change Lever Support, 14TXT6
2-33	S-581	Belt Change Plate, 14TXT6
2-34	S-128	Belt Change Shaft, 14TXT6
2-35	S-582	Belt Change Spring, 14TXT6
2-36	S-130	Pedal Support "L"
2-37	S-131	Pedal Spring
2-38	S-132	Pedal Shaft
2-39	S-583	Agitator Assembly, 14TXT6
2-39	S-584	Agitator Assembly, 12TXT6, 12TXT4, 12SXT4
2-40	S-133	Agitator Rotor Assy, 12TXT6, 12TXT4, 12SXT4
2-40	S-585	Agitator Rotor Assy, 14TXT6
2-41	S-586	Idling Pulley Assy, 14TXT6
2-42	S-135	Agitator Shaft Assy, 14TXT6
2-42	S-141	Agitator Shaft Assy, 12TXT6, 12TXT4, 12SXT4
2-43	S-587	Agitator Support A Assy, 14TXT6

2-43	S-142	Agitator Support A Assy, 12TXT6, 12TXT4, 12SXT4
2-44	S-588	Agitator Support B Assy, 14TXT6
2-44	S-143	Agitator Support B Assy, 12TXT6, 12TXT4, 12SXT4
2-45	S-120	Belt Stopper 3, 12TXT6, 12TXT4, 12SXT4
2-46	S-139	Brush Rotor A, 14TXT6
2-47	S-589	Brush Rotor B, 14TXT6
2-47	S-590	Brush Rotor B Assy, 12TXT6, 12TXT4, 12SXT4
2-48	S-241	Main Body Packing, 12TXT4, 12SXT4
2-49	S-161	Main Body Packing M, 12TXT4, 12SXT4
2-50	S-148	Bottom Plate Spring
2-51	S-149	Roller Shaft
2-52	S-150	Seal Tape A, 14TXT6
2-53	S-151	Seal Tape B
2-54	S-152	Seal Tape C
2-55	S-121	Belt Vibration-Proof Rubber, 12TXT6, 12TXT4, 12SXT4
2-56	S-246	M Packing, 12SXT4
2-57	S-159	Seal Tape E, 12TXT6, 12TXT4, 12SXT4
2-58	S-160	Seal Tape F
2-59	S-158	Seal Tape G
2-60	S-247	Seal Tape D, 12TXT4, 12SXT4
2-61	S-162	Belt Guide Plate, 12TXT6, 12TXT4, 12SXT4

## ■ EXTERNAL PARTS

3-1	S-591	Front Handle
3-2	S-592	Rear Handle
3-3	S-593	Upper Hanger
3-4	S-594	Hose Clamp
3-5	S-595	Pipe Clamp
3-6	S-596	Brush Clamp
3-7	S-597	Panel Seal
3-8	S-598	Main Body
3-9	S-599	Panel, 14TXT6
3-9	S-601	Panel, 12TXT6
3-9	S-602	Panel, 12TXT4
3-9	S-603	Panel, 12SXT4
3-10	S-604	Slide Knob
3-11	S-605	Dust Cover, 14TXT6
3-11	S-606	Dust Cover, 12TXT6
3-11	S-607	Dust Cover, 12TXT4
3-11	S-608	Dust Cover, 12SXT4
3-12	S-609	Clamp Knob, 14TXT6
3-12	S-610	Clamp Knob, 12TXT6, 12TXT4
3-12	S-611	Clamp Knob, 12SXT4
3-13	S-612	Hose Assembly
3-14	S-191	Head Shelter Plate, 12TXT6, 12TXT4, 12SXT4
3-15	S-178	Wheel
3-16	S-613	Motor Cover, 14TXT6
3-16	S-614	Motor Cover, 12TXT6, 12TXT4
3-16	S-615	Motor Cover, 12SXT4
3-17	S-616	Nozzle Head L Assy, 14TXT6
3-17	S-617	Nozzle Head M Assy, 12TXT6
3-17	S-618	Nozzle Head M Assy, 12TXT4
3-17	S-619	Nozzle Head M Assy, 12SXT4
3-18	S-620	Lens L, 14TXT6
3-18	S-621	Lens M, 12TXT6
3-18	S-647	Lens M, 12TXT4
3-18	S-622	Lens M, 12SXT4
3-19	S-623	Pedal L
3-20	S-624	Belt Change Lever, 14TXT6
3-21	S-186	Belt Cover L, 14TXT6
3-21	S-187	Belt Cover M, 12TXT6, 12TXT4, 12SXT4
3-22	S-625	Bottom Plate L, 14TXT6
3-22	S-626	Bottom Plate M, 12TXT6, 12TXT4, 12SXT4

Models: EC-14TXT6, EC-12TXT6, EC-12TXT4, EC-12SXT4

3-23	S-188	Bottom Plate Knob
3-24	S-189	Roller
3-25	S-190	Pulley Cover, 14TXT6
3-26	S-627	Out Extension Pipe
3-27	S-628	In Extension Pipe
3-28	S-629	Crevice Tool 1
3-29	S-630	Nozzle Brush
3-30	S-631	Upholstery Nozzle
3-31	S-632	Hole Cover

#### ■ MISCELLANEOUS

4-2	S-007	Paper Bag
4-3	S-633	Feature Sticker, 14TXT6, 12TXT6, 12TXT4
4-3	S-634	Feature Sticker, 12SXT4
4-4	S-635	Name Plate, 14TXT6
4-4	S-636	Name Plate, 12TXT6
4-4	S-637	Name Plate, 12TXT4
4-4	S-638	Name Plate, 12SXT4

#### ■ SCREWS, NUTS and WASHERS

5-1	S-639	Special Screw, for handle fixing
5-2	S-340	Washer, upper hanger and clamp knob

5-3	S-197	Washer, wheel shaft
5-4	S-198	Wave Washer, 14TXT6
5-5	S-199	Special Nut, left hand screw type, 14TXT6
5-6	S-200	Nut
5-7	S-201	Speed Nut
5-8	S-202	Screw
5-9	S-203	Screw
5-10	S-204	Screw, 14TXT6
5-10	S-204	Screw, 12TXT6
5-10	S-204	Screw, 12TXT4, 12SXT6
5-11	S-641	Screw
5-12	S-236	Screw
5-13	S-642	Screw, black
5-14	S-643	E-Crip
5-15	S-238	E-Crip
5-16	S-644	Screw, 14TXT6, 12TXT6
5-17	S-645	Screw, 14TXT6, 12TXT6